6. Exploded View and Parts List

6-1 Cabinet Assembly (1) ---------- 6-2
6-2 Cabinet Assembly (2) ---------- 6-4
6-3 Cabinet Assembly (3) ---------- 6-6
6-4 Cabinet Assembly (4) ---------- 6-8
6-5 EVF (SCA30/VP-A30/VP-A31/VP-A34/VP-A800/VP-A850) -------- 6-10
6-6 CVF (SCA33/SCA35/SCA80/SCA85/VP-A33) ---------- 6-12
6-7 Mechanical Parts (1) ---------- 6-14
6-8 Mechanical Parts (2) ---------- 6-16
6-9 Mechanical Parts (3) ---------- 6-18

6-1 Cabinet Assembly (1)

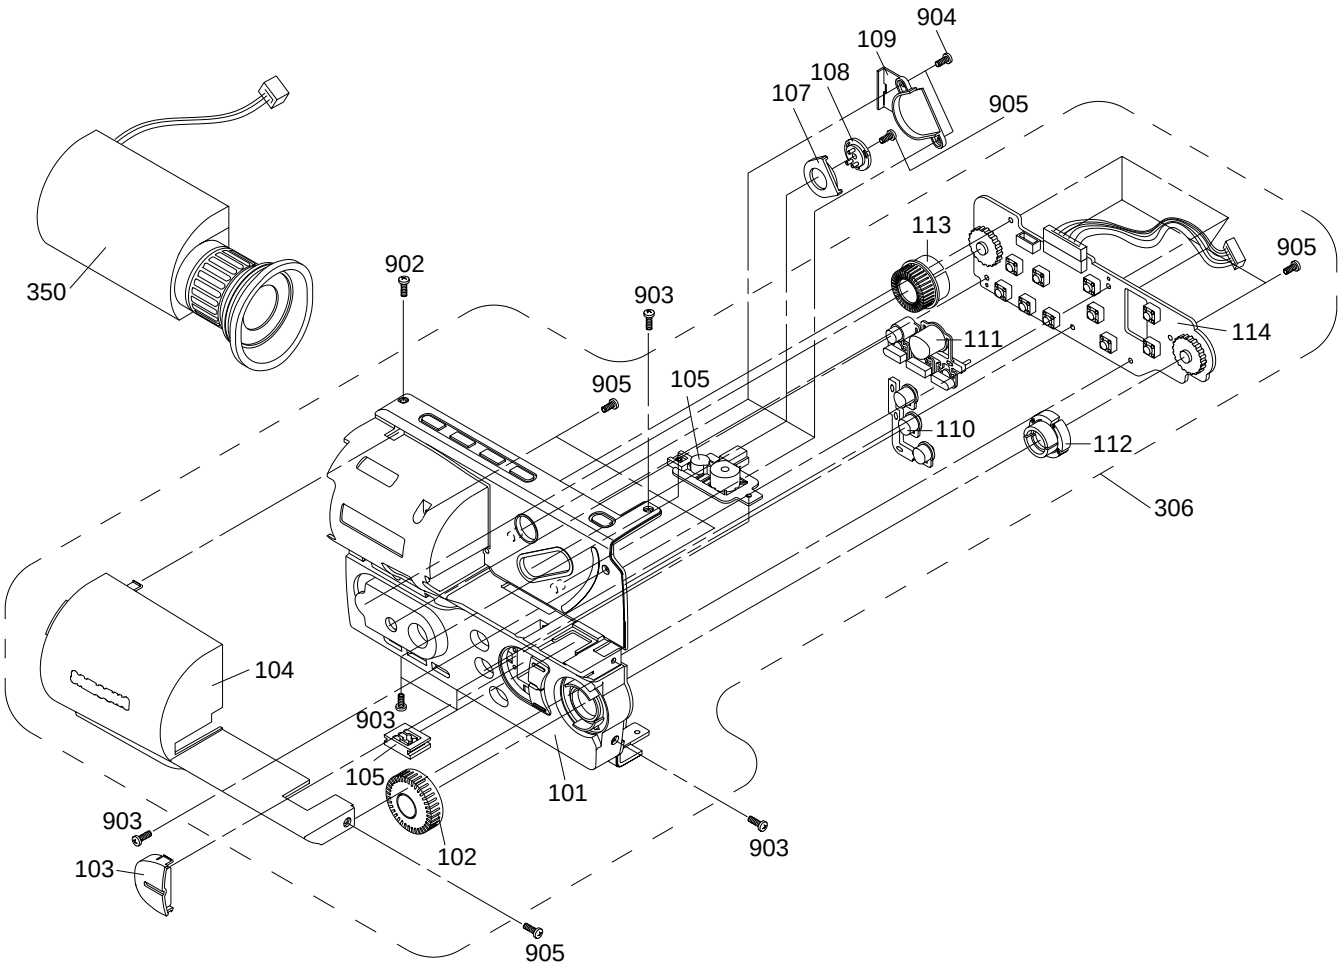

Loc. No	New Part No	Description and Specification	Remark
101	AD64-32016A	CASE-LEFT(C);-,ABS94,HB,-,-,-,22X,VP-A85	VP-A850
	AD64-32016B	CASE-LEFT(C);-,ABS94,HB,-,-,-,22X,VP-A34	VP-A34
	AD64-32016C	CASE-LEFT(C);-,ABS94,HB,-,-,-,22X,VP-A80	VP-A800
	AD64-32016D	CASE-LEFT(C);-,ABS94,HB,-,-,-,22X,SCA35	SCA35
	AD64-32016E	CASE-LEFT(C);-,ABS94,HB,-,-,-,22X,SCA80	SCA80
	AD64-32016F	CASE-LEFT(C);-,ABS94,HB,-,-,-,22X,SCA85	SCA85
	AD64-32024A	CASE-LEFT(A);-,ABS94,HB,-,-,-,16X,VP-A30	VP-A30
	AD64-32024B	CASE-LEFT(A);-,ABS94,HB,-,-,-,16X,VP-A31	VP-A31
	AD64-32024C	CASE-LEFT(A);-,ABS94,HB,-,-,-,16X,VP-A33	VP-A33
	AD64-32024D	CASE-LEFT(A);-,ABS94,HB,-,-,-,16X,SCA30	SCA30
	AD64-32024E	CASE-LEFT(A);-,ABS94,HB,-,-,-,16X,SCA33	SCA33
102	AD64-10897A	KNOB-MENU;-,ABS94,HB,-,-,VP-A850	ALL
103	AD63-30583A	COVER-JIG;-,ABS94,HB,-,-,-,-,VP-A850	ALL
104	AD63-30582A	COVER-LEFT(C);-,ABS94,HB,-,-,-,22X,VP-A8	SCA35/SCA80/SCA85/VP-A34 VP-A800/VP-A850
	AD63-30586A	COVER-LEFT(A);-,ABS94,HB,-,-,-,16X,VP-A3	SCA30/SCA33/VP-A30/VP-A31 VP-A33
105	AD61-21149A	HOLDER-LOCK EVF;-,POM,-,BLK,-,VP-A850	ALL
106	AD98-12026W	ASS'Y-BASE TRIPOD;VP-A85,BLK/AL	ALL
107	AD61-70087A	RAIL-EVF;-,POM,-,-,BLK,-,-	ALL
108	AD61-70088A	RAIL-LOCK;-,ABS94,HB,-,BLK,-,-	ALL
109	AD61-50785A	GUIDE-EVF;-,ABS94,HB,-,BLK,-,-	ALL
110	AD64-11018A	BUTTON-FADE;-,ABS94,HB,-,-,VP-A850	ALL
111	AD64-11015A	BUTTON-BLC;-,ABS94,HB,-,BLC,VP-A30	SCA30/VP-A30
	AD64-11015B	BUTTON-BLC;-,ABS94,HB,-,XDR',VP-A850	VP-A31/VP-A33/VP-A34/VP-A800 VP-A850
	AD64-11015C	BUTTON-BLC;-,ABS94,HB,-,I-BLC,SCA85	SCA33/SCA35/SCA80/SCA85
112	AD61-21150A	HOLDER-MENU;-,POM,-,NTR,-,VP-A850	ALL
113	AD64-10898A	KNOB-MF;-,ABS94,HB,-,-,VP-A850	ALL
114	AD90-10849J	ASS'Y-FUNCTION;EVF,A3	VP-A30/VP-A31/VP-A34/VP-A800 VP-A850/SCA30
	AD90-10849K	ASS'Y-FUNCTION;CVF,A3	VP-A33/SCA33/SCA35/SCA80 SCA85
306	AD98-12026X	ASS'Y-CASE LEFT;VP-A850,22X/Hi8	VP-A850
	AD98-12027P	ASS'Y-CASE LEFT;VP-A30,-	VP-A30
	AD98-12027Q	ASS'Y-CASE LEFT;VP-A31,-	VP-A31
	AD98-12027R	ASS'Y-CASE LEFT;VP-A33,-	VP-A33
	AD98-12027S	ASS'Y-CASE LEFT;VP-A34,-	VP-A34
	AD98-12027T	ASS'Y-CASE LEFT;VP-A80,-	VP-A800
	AD98-12027U	ASS'Y-CASE LEFT;SCA30,-	SCA30
	AD98-12027V	ASS'Y-CASE LEFT;SCA33,-	SCA33
	AD98-12027W	ASS'Y-CASE LEFT;SCA35,-	SCA35
	AD98-12027X	ASS'Y-CASE LEFT;SCA80,-	SCA80
	AD98-12027Y	ASS'Y-CASE LEFT;SCA850,-	SCA85
350	AD90-10842X	ASS'Y-EVF;VP-L300,S8C-PAL LCD NOR	VP-A30/VP-A31/VP-A800
	AD90-10850B	ASS'Y-CVF;VP-A33,PAL,COL,A3-PJ	VP-A33
	AD90-10850C	ASS'Y-CVF;SCA33,COL,NTSC,A3-PJ	SCA33/SCA80
	AD90-10851Z	ASS'Y-EVF;SCA30,NTSC,B/W,A3-PJ	SCA30
	AD94-00034A	ASS'Y-EVF;VP-A34,B/W	VP-A34/VP-A850
	AD94-00035A	ASS'Y-CVF;SCA35,COLOR	SCA35/SCA85
902	AD60-10543A	SCREW-MACHINE;-,BH,+,-,M2,9,BLK,-,BLK	ALL
903	AC60-10020A	SCREW-MACHINE;BH,+,M2,X5,FZB,FE,UP,-,-	ALL
904	AC60-10055A	SCREW-TAPPING;BH,+,-,M2,X4,FZB	ALL
905	AC60-10054A	SCREW-TAPPING;BH,+,-,M2,X6,FZB	ALL
906	AD60-00002A	SCREW MACHINE;-,-,-,-,-,-,M2X4, -FH, FEN	ALL

6-2 Cabinet Assembly (2)

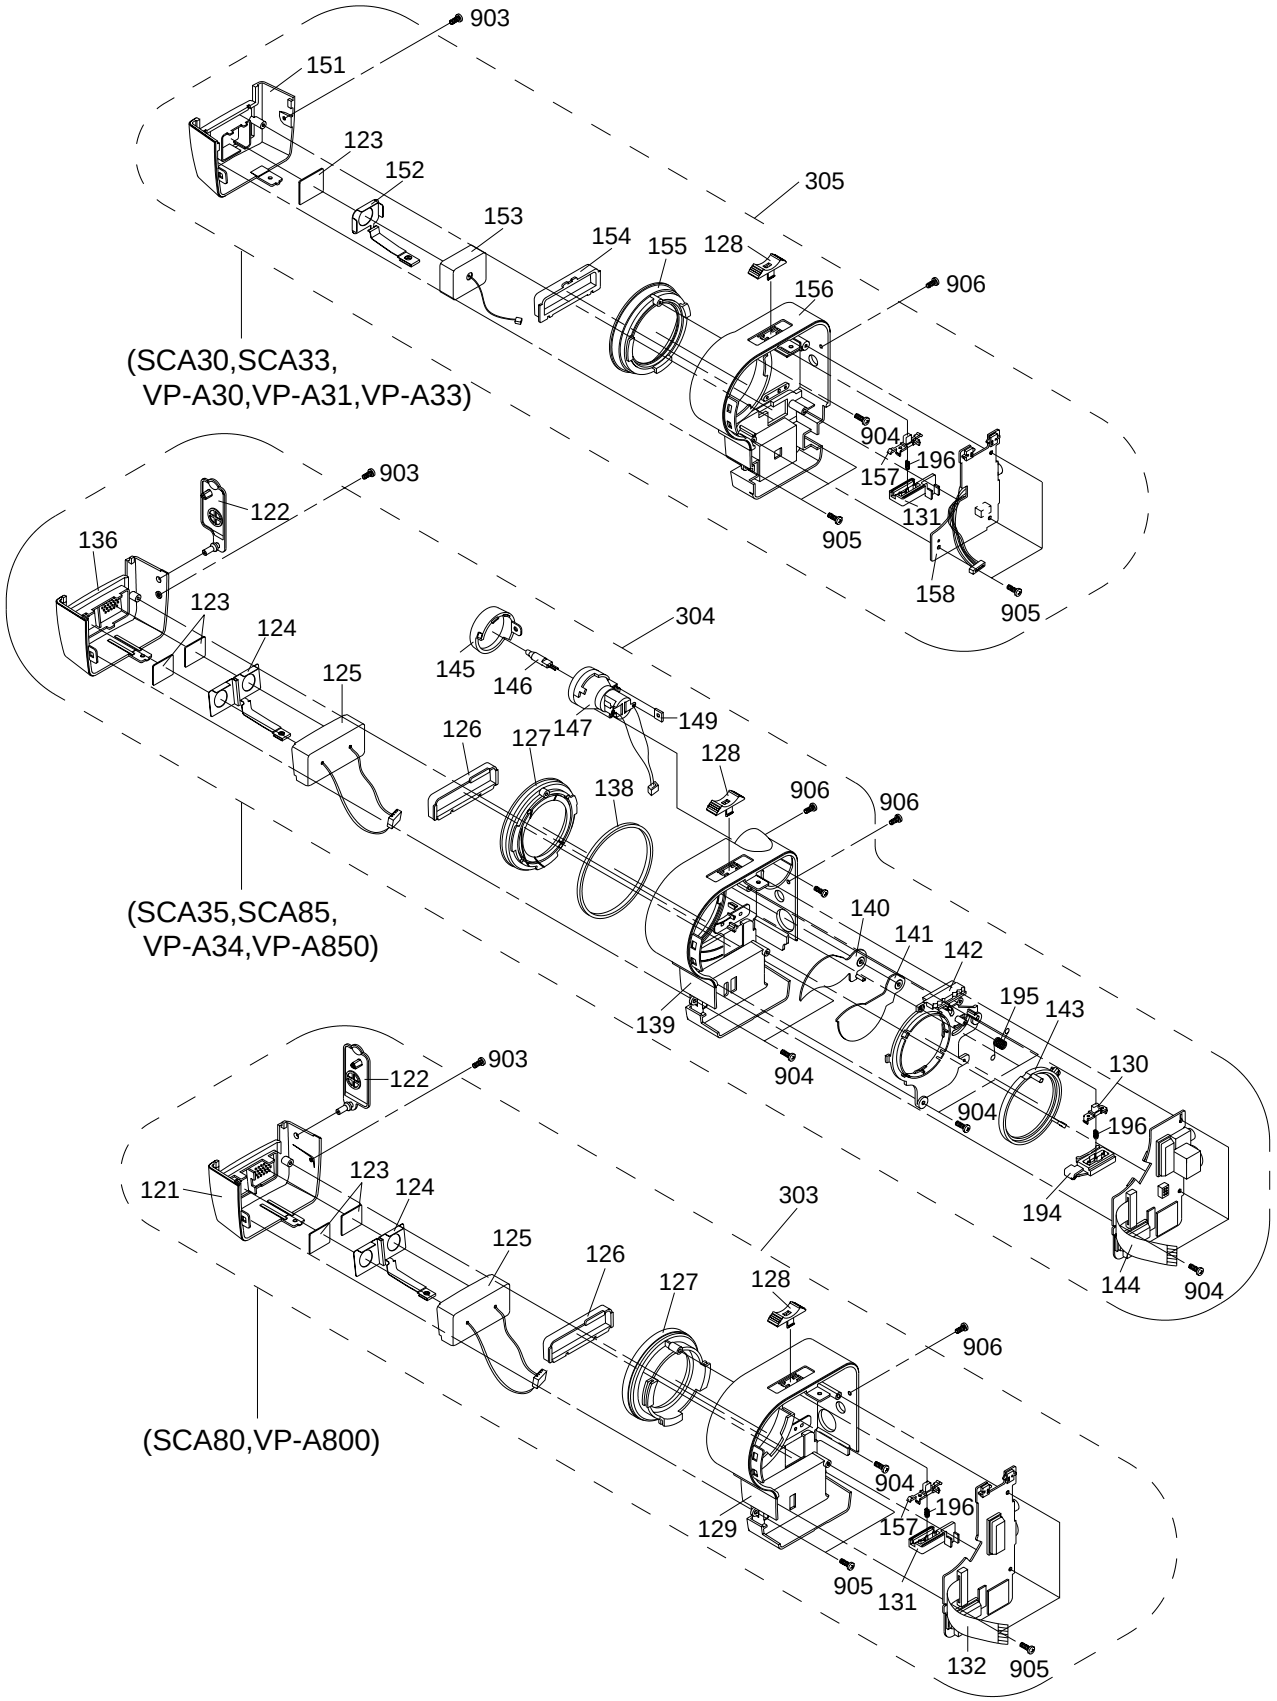

Loc. No	New Part No	Description and Specification	Remark
121	AD63-30588A	COVER-FRONT(B);-,ABS94,HB,-,-,-,22X,VP-A	VP-A800/SCA80
122	AD63-30584A	COVER-JACK(C);-,TPE,-,-,BLK,-,-,VP-A850	SCA35/SCA85/VP-A34/VP-A850
	AD63-30585A	COVER-JACK(B);-,TPE,-,-,BLK,-,-,VP-A80	SCA80/VP-A800
123	AD63-70074A	SHEET-MIC;-,HIMERON,-,-,-,-,-,VP-A850	ALL
124	AD63-40954A	SHIELD-MIC(C);-,SPTE,T0.25,-,VP-A850	SCA35/SCA85/VP-A34/VP-A850
	AD63-40956A	SHIELD-MIC B;-,SPTE,T0.25,-,VP-A80	VP-A800/SCA80
125	AD98-12027C	ASS'Y-MIC;VP-A850/XEU,STEREO(1),-	SCA85/VP-A800/VP-A850/SCA80
	AD98-12027L	ASS'Y-MIC;SCL300,MONO	SCA35/VP-A34
126	AD64-40691A	WINDOW-REMOCON(C);-,PMMA,-,-,BLU,-,VP-A8	SCA85/VP-A800/VP-A850/SCA80
	AD64-40691B	WINDOW-REMOCON(C);-,PMMA,-,-,BLU,22X,MON	SCA35/VP-A34
127	AD67-10203A	LENS-HOOD(B);-,-,PA+ABS BLK,-,-,-,VP-A80	VP-A800/SCA80
128	AD64-10895A	KNOB-POWER;-,PC+ABS,-,BLK,-,SC-L300	ALL
129	AD64-32018A	CASE-FRONT(B);-,PC+ABS,94HB,-,-,-,-,VP-A	VP-A800/SCA80
	AD64-10896A	BUTTON-LOCK;-,ABS94HB,-,-,-,SC-L300	SCA85/VP-A34/VP-A850/SCA35
131	AD61-21152A	HOLDER-POWER;-,ABS,94HB,BLK,-,VP-A80	SCA30/SCA33/SCA80/VP-A30 VP-A31/VP-A33/VP-A800
132	AC90-10800H	ASS'Y-MIC BOARD;SCA800,ST	SCA80/VP-A800
136	AD63-30587A	COVER-FRONT(C);-,ABS94,HB,-,-,-,22X,VP-A	SCA35/SCA85/VP-A34/VP-A850
137	AD67-10204A	LENS-HOOD(C);-,-,PC+ABS BLK,-,-,22X/BILC	SCA35/SCA85/VP-A34/VP-A850
138	AD60-42042A	RING-HOOD(AL);-,-,-,-,-,AL	SCA35/SCA85/VP-A34/VP-A850
139	AD64-32017A	CASE-FRONT(C);-,PC+ABS,94HB,-,-,-,-,VP-A	SCA85/VP-A850
	AD64-32029B	CASE-FRONT(C);-,PC+ABS,94HB,-,-,-,S-JACK	SCA35/VP-A34
140	AD63-32013A	COVER-LENS TOP;-,PC+ABS,-,BLK,-,SC-L300,	SCA35/SCA85/VP-A34/VP-A850
141	AD63-32014A	COVER-LENS BOTTOM;-,PC+ABS,-,BLK,-,SC-L3	SCA35/SCA85/VP-A34/VP-A850
142	AD61-21139A	HOLDER-COVER;-,PC+ABS,-,BLK,-,SC-L350	SCA35/SCA85/VP-A34/VP-A850
143	AD61-21140A	HOLDER-RING;-,POM,-,-,-,SC-L350	SCA35/SCA85/VP-A34/VP-A850
144	AD90-10850K	ASS'Y-FRONT BOARD;VP-A85/SCA85,EIS,REMOC	SCA85/VP-A850
	AD90-10850Z	ASS'Y-FRONT BOARD;VP-L350,NOR,MONO,EIS	SCA35/VP-A34
145	AD64-20624A	MASK-LAMP;-,PC,-,-,CLR,VP-A85	SCA35/VP-A34/SCA85/VP-A850
146	4713-001007	LAMP-HALLOGEN;6V,500mA,3W,YEL,45Lm,-,4.8	SCA35/SCA85/VP-A34/VP-A850
147	AD98-12028B	ASS'Y-LIGHT	VP-A34/VP-A850/SCA35/SCA85
149	AC61-32047A	PLATE-NUT;SECC,T0.8,-,-,SV-V40	SCA35/SCA85/VP-A34/VP-A850
151	AD63-30589A	COVER-FRONT(A);-,ABS94,HB,-,-,-,16X,VP-A	SCA30/SCA33/VP-A30/VP-A31 VP-A33
152	AD63-40955A	SHIELD-MIC A;-,SPTE,T0.25,-,VP-A30	SCA30/SCA33/VP-A30/VP-A31 VP-A33
153	AD98-12027M	ASS'Y-MIC;VP-A30,MONO/16X	SCA30/SCA33/VP-A30/VP-A31 VP-A33
154	AD64-40692A	WINDOW-REMOCON(A);-,PMMA,-,-,BLU,SILK(X)	SCA30/SCA33/VP-A30/VP-A31 VP-A33
155	AD67-10202A	LENS-HOOD(A);-,-,PA+ABS BLK,-,-,16X,VP-A	SCA30/SCA33/VP-A30/VP-A31 VP-A33
156	AD64-32019A	CASE-FRONT(A);-,ABS,94HB,-,-,-,-,VP-A30	VP-A30
	AD64-32019B	CASE-FRONT(A);-,ABS,94HB,-,-,-,P31/P33/N	SCA30/SCA33/VP-A31/VP-A33
157	AD64-11020A	BUTTON-LOCK;-,POM,-,RED,-,VP-A30	SCA30/SCA33/SCA80/VP-A30 VP-A31/VP-A33/VP-A800
158	AC90-10800E	ASS'Y-MIC BOARD;SCA30,MO	SCA30/VP-A30
	AC90-10800F	ASS'Y-MIC BOARD;SCA30,MO	SCA33/VP-A31/VP-A33
194	AD61-21146A	HOLDER-POWER;-,ABS94,HB,-,16X,SC-L350	SCA35/VP-A34/SCA85/VP-A850
195	AD61-60631A	SPRING-COVER;-,-,SWPB,-,-,-,SC-L300	SCA35/VP-A34/SCA85/VP-A850
196	AD61-60601A	SPRING-KNOB POWER;-,-,SUS304 WPB,-,-,-,-	ALL
303	AD98-12028G	ASS'Y-CASE FRONT;VP-A80,-	SCA80/VP-A800
304	AD98-12026Y	ASS'Y-CASE FRONT;VP-A85,22X/Hi8	SCA85/VP-A850
	AD98-12028F	ASS'Y-CASE-FRONT	VP-A34/SCA35
305	AD98-12028C	ASS'Y-CASE FRONT;VP-A30,-	VP-A30
	AD98-12028D	ASS'Y-CASE FRONT;VP-A31,-	SCA33/VP-A31/VP-A33
	AD98-12028H	ASS'Y-CASE FRONT;SCA30,-	SCA30
903	AC60-10020A	SCREW-MACHINE;BH,+,M2,X5,FZB,FE,UP,-,-	ALL
904	AC60-10055A	SCREW-TAPPING;BH,+,-,M2,X4,FZB	ALL
905	AC60-10054A	SCREW-TAPPING;BH,+,-,M2,X6,FZB	ALL
906	AD60-00002A	SCREW MACHINE;-,-,-,-,-,-,M2X4, -FH, FEN	ALL

6-3 Cabinet Assembly (3)

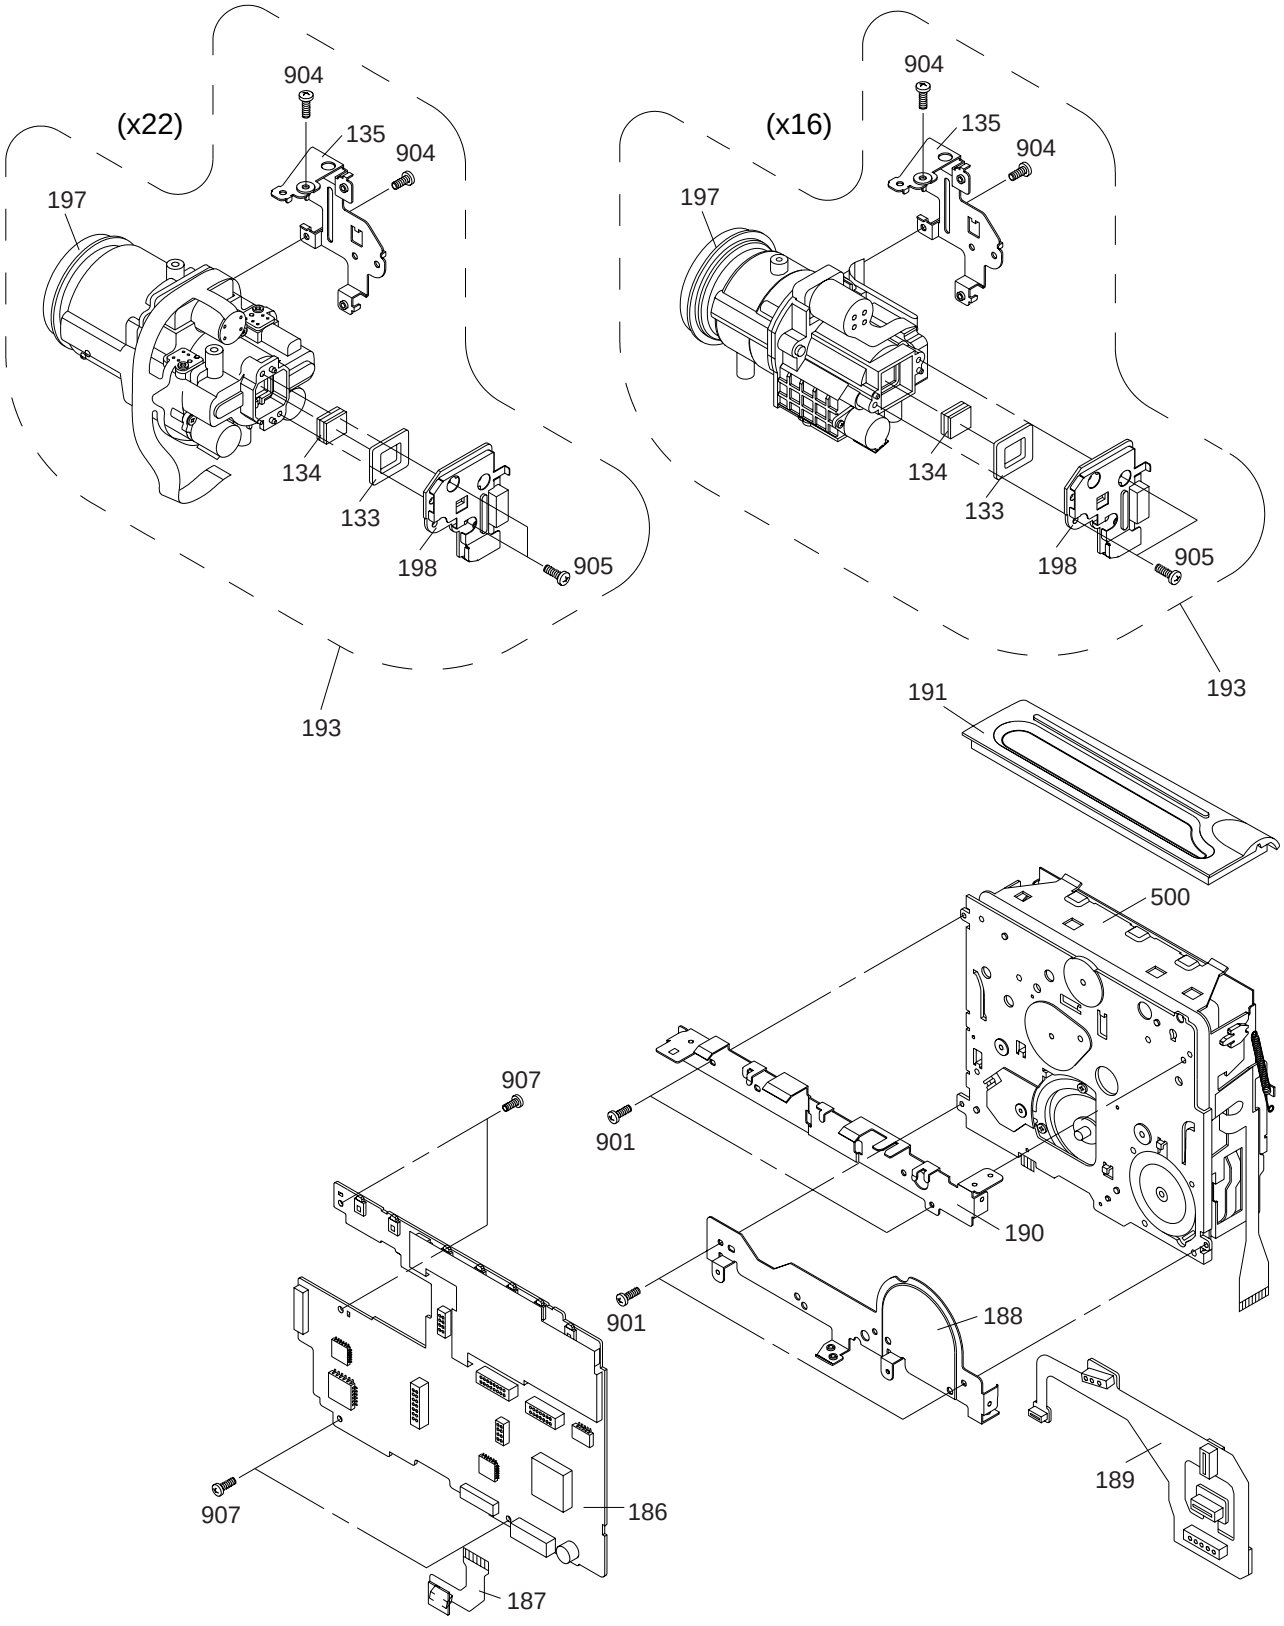

Loc. No	New Part No	Description and Specification	Remark
133	AD63-62002A	SPACER-CCD;-,SILICONE,T1,BLK,-,VP-A57	VP-A30/VP-A31/VP-A33/SCA30 SCA33
	AD63-62008A	SPACER-CCD	VP-A34/VP-A800/VP-850/SCA35 SCA80/SCA85
134	AD29-92001D	FILTER-OLP;SV-2C04MM,KSS,SPACE,TR	SCA30/SCA33/SCA35/VP-A30 VP-A31/VP-A33
	AD29-92001E	FILTER;SV-3C08MM,KSS,SPACE,TR	SCA80/SCA85/VP-A34/VP-A800 VP-A850
135	AD61-12048A	BRACKET-LENS;-,SUS T0.5,SC-L300	ALL
186	AD90-10847K	ASS'Y-MAIN BOARD;VP-A85,PAL	VP-A850
	AD90-10847L	ASS'Y-MAIN BOARD;SCA85,NTSC	SCA85
	AD90-10848N	ASS'Y-MAIN BOARD;VP-A80,PAL	VP-A800
	AD90-10848P	ASS'Y-MAIN BOARD;VP-A34,PAL	VP-A34
	AD90-10848Q	ASS'Y-MAIN BOARD;VP-A33,PAL	VP-A33
	AD90-10848R	ASS'Y-MAIN BOARD;VP-A30,PAL	VP-A30
	AD90-10848S	ASS'Y-MAIN BOARD;SCA35,NTSC	SCA35
	AD90-10848T	ASS'Y-MAIN BOARD;SCA33,NTSC	SCA33
	AD90-10848U	ASS'Y-MAIN BOARD;SCA30,NTSC	SCA30
	AD90-10854M	ASS'Y-MAIN BOARD;VP-A31,PAL	VP-A31
	AD97-00274A	ASS'Y--MAIN BOARD;SCA800,-,-	SCA80
187	AD94-00005A	ASS'Y-FPC,C;A3/S3,ROTARY-FPC	ALL
188	AD61-00054A	CHASSIS-BOTTOM;-,STS,-,0.6,-,-,VP-A850	ALL
189	AD90-10832B	ASS'Y-FPC DECK;VP-A20,DECK	ALL
190	AD61-11074A	CHASSIS-TOP;-,STS,-,T0.6,-,-,VP-A85	ALL
191	AD98-12027D	ASS'Y-CASE TOP;SC-L300,-	ALL
193	AD97-00592A	ASS'Y-CAMERA;A3,-,X22,570K,SAMSUNG	VP-A34/VP-A850
	AD97-00594A	ASS'Y-CAMERA;-,-,X22,470K,SAMSUNG	VP-A800/SCA80/SCA85
	AD97-00595A	ASS'Y-CAMERA;A3,-,X22,270K,SAMSUNG	SCA35
	AD90-10854T	ASS'Y-CAMERA;VP-A30,PAL	VP-A30/VP-A31/VP-A33
	AD90-10854W	ASS'Y-CAMERA;SCA30,NTSC	SCA30/SCA33
197	AD97-00596A	ASS'Y-LENS;A3,-,X22,NORMAL,SAMSUNG	SCA35
	AD97-00597A	ASS'Y-LENS;-,-,X22,HI8,SAMSUNG	VP-A34/VP-A800/VP-A850 SCA80/SCA85
	AD90-10854B	ASS'Y-LENS;X16,LENS	VP-A30/VP-A31/VP-A33 SCA30/SCA33
198	AD90-10849X	ASS'Y-CCD BOARD;VP-A85,Hi8,EIS	VP-A34/VP-A850
	AD90-10849Y	ASS'Y-CCD BOARD;SCA85,Hi8,EIS	VP-A800/SCA80/SCA85
	AD97-00076A	ASS'Y--CCD;A3,PAL,-,-	VP-A30/VP-A31/VP-A33
	AD97-00077A	ASS'Y--CCD;A3,NTSC,-,-	SCA30/SCA33
	AD97-00232A	ASS'Y--CCD;270K,X22,-,-	SCA35
500	AD97-00282A	ASS'Y-DECK	SCA30/SCA33/SCA35/SCA80 SCA85
	AD97-00283A	ASS'Y-DECK	VP-A30/VP-A31/VP-A33/VP-A34 VP-A800/VP-A850
901	AC60-10017A	SCREW-MACHINE;BH,+,M1.7,X3.5,FEFZY,SWCH1	ALL
904	AC60-10055A	SCREW-TAPPING;BH,+,-,M2,X4,FZB	ALL
905	AC60-10054A	SCREW-TAPPING;BH,+,-,M2,X6,FZB	ALL
907	AC60-10024A	SCREW-MACHINE;BH,+,M2,X3,FZW,FE,-,-,-	ALL

6-4 Cabinet Assembly (4)

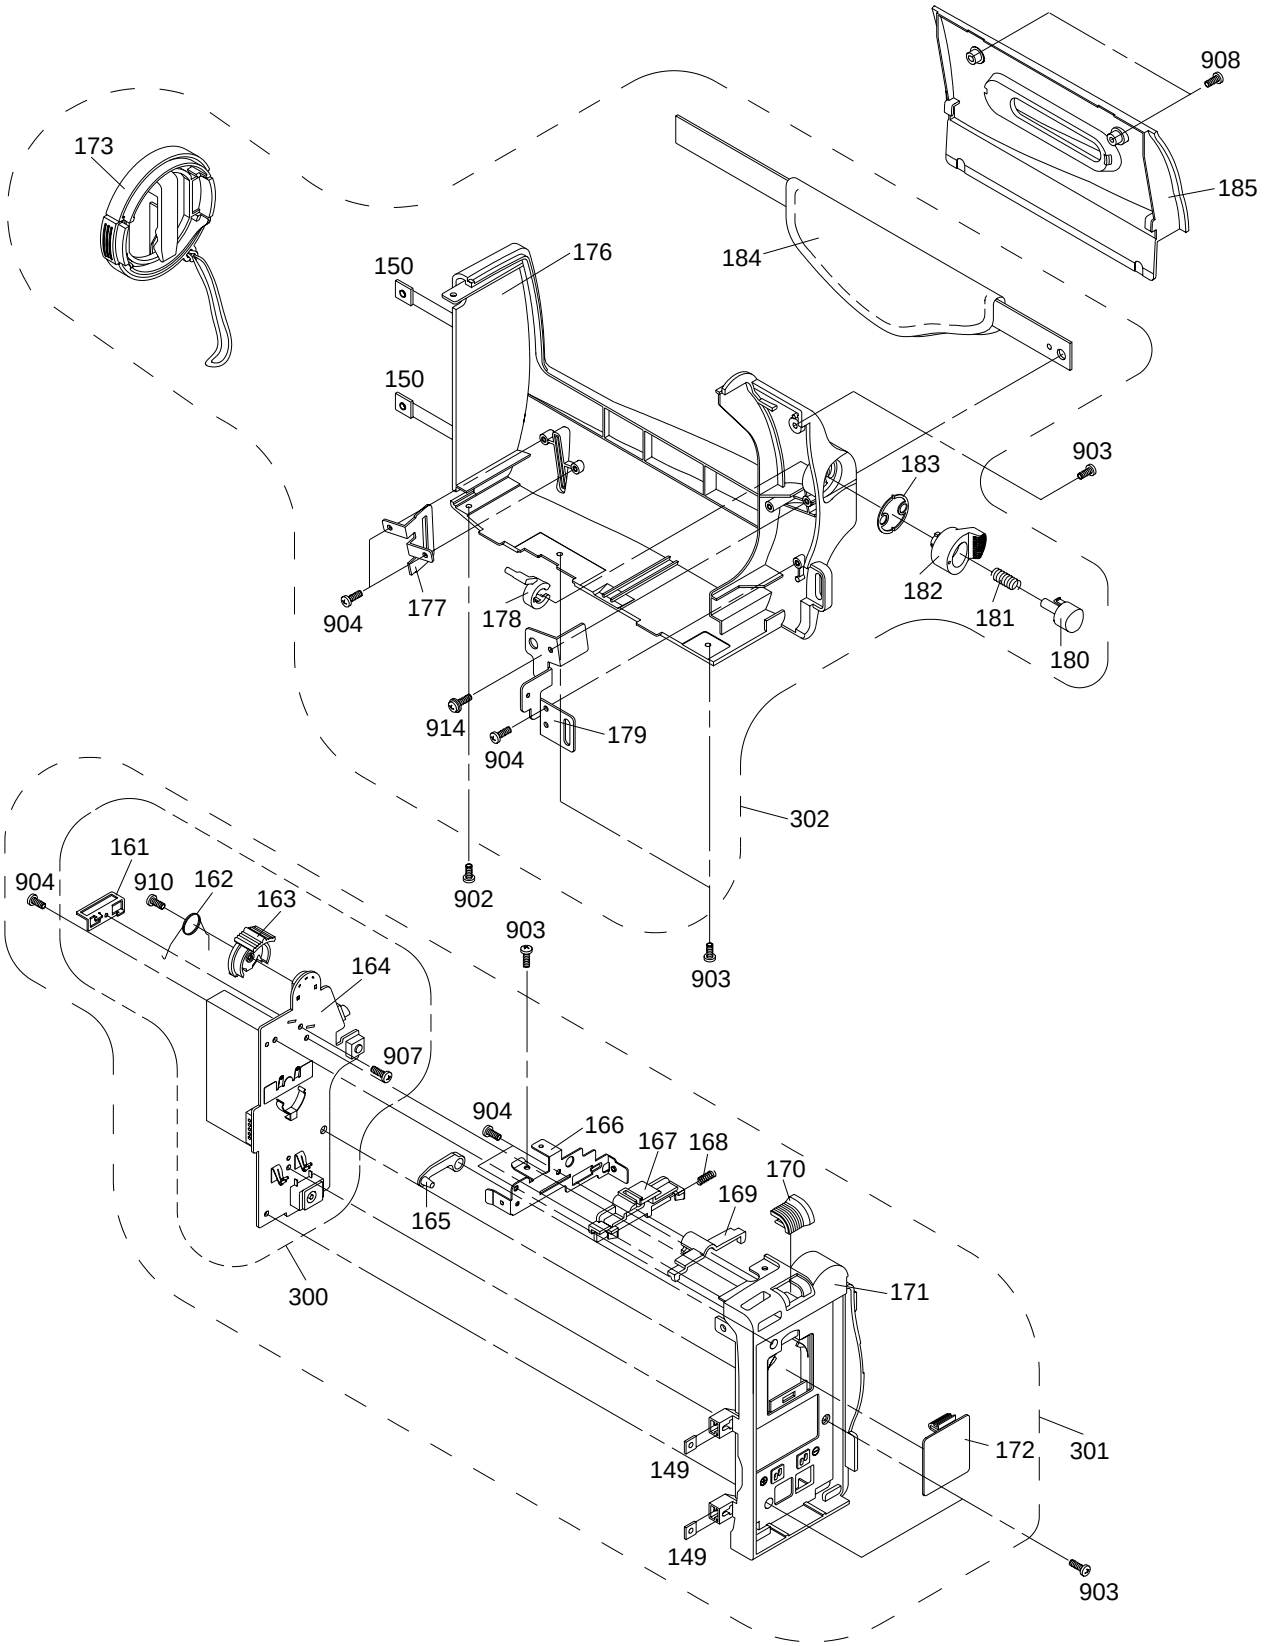

Loc. No	New Part No	Description and Specification	Remark
149	AC61-32047A	PLATE-NUT;SECC,T0.8,-,-,SV-V40	ALL
150	AC61-20223A	HOLDER-LOCK;SECC,T1.0,NAT,-,-,-	ALL
161	AD61-22014A	HOLDER-ZOOM;-,ABS94HB,T0.8,-,-,-	ALL
162	AD61-60568A	SPRING-ZOOM;-,-,SUS304,-,D0.55,-,SV-S99	ALL
163	AD64-10893A	KNOB-ZOOM;-,PC+ABS,-,-,-,SC-L300	ALL
164	AD99-90003B	ASS'Y-REAR BOARD,m;VP-L300/XEU,S8C-PAL LC	SCA30/SCA33/SCA80/VP-A30 VP-A31/VP-A33/VP-A800
	AD99-90003G	ASS'Y-REAR BOARD,m;VP-L350/XEU,S8C-PAL LC	SCA35/SCA85/VP-A34/VP-A850
165	AD61-21155A	HOLDER-PUSH BATT;-,POM,-,BLACK,SCL300,-	ALL
166	AD61-12047A	BRACKET-BATT.EJECT;SUS T0.5 SC-L300,-,-	ALL
167	AD61-21138A	HOLDER-BATTERY EJECT;-,POM94,HB,BLK,-,SC	ALL
168	AD61-60636A	SPRING-BATT.;-,-,SUS304,-,PWD,-,SCL300	ALL
169	AD61-30234A	LOCKER-BATTERY EJECT;-,PC94,HB,BLK,-,SC-	ALL
170	AD64-10892A	KNOB-BATTERY;-,ABS94,HB,-,-,SC-L300	ALL
171	AD64-32023A	CASE-REAR;-,ABS94,HB,-,-,-,A3-PJ,VP-A850	ALL
172	AC63-30040A	COVER-LI BATTERY;PP,HB,T1.5,BLK,H3.5,-,V	ALL
173	AD59-10566A	UNIT-CAP HOOD;A3/S3,-	SCA30/SCA33/SCA80/VP-A30 VP-A31/VP-A33/VP-A800
176	AD64-32005A	CASE-RIGHT;-,ABS94,HB,-,-,-,-,SC-L300	ALL
177	AD61-12045A	BRACKET-GRIP FRONT;-,SUS T1.2,SC-L300,-,	ALL
178	AD61-21137A	HOLDER-START/STOP;-,POM,-,-,-,SC-L300	ALL
179	AD61-12046A	BRACKET-GRIP BACK;-,SUS T0.8,SC-L300	ALL
180	AD64-10890A	BUTTON-REC/STOP;-,ABS94,HB,-,-,SC-L300	ALL
181	AD61-60521A	SPRING-REC;-,TS,SWPB,0.25,4.3,-,SC-80	ALL
182	AD64-10891A	KNOB-START/STOP;-,ABS94,HB,-,-,SC-L300	ALL
183	AD61-60533A	SPRING-REC STOP;-,-,STS,T0.2,-,-,VP-A57	ALL
184	AD63-10219A	GRIP-BELT ASS'Y;-,LEATHER,-,-,BLK,-,SC-L3	ALL
185	AD97-00246A	ASS'Y-COVER HOUSING;VP-A800,-,HI8,LABEL(X	SCA80/VP-A800
	AD97-00247A	ASS'Y-COVER HOUSING	VP-A34/SCA35
	AD98-12027A	ASS'Y-COVER HOUSING	VP-A850/SCA85
	AD98-12027E	ASS'Y-COVER HOUSING;SC-L300,-	SCA30/SCA33/VP-A30/VP-A31 VP-A33
300	AD90-10841K	ASS'Y-REAR BOARD;VP-L300/XEU,S8C-PAL LCD	SCA30/SCA33/SCA80/VP-A30 VP-A31/VP-A33/VP-A800
	AD90-10852M	ASS'Y-REAR BOARD;VP-L350/XEU,LIGHT,S8C-PA	SCA35/SCA85/VP-A34/VP-A850
301	AD98-12026Z	ASS'Y-CASE-REAR;VP-A30,LIGHT(X)	SCA30/SCA33/SCA80/VP-A30 VP-A31/VP-A33/VP-A800
	AD98-12029Z	ASS'Y-CASE REAR;VP-A850,LIGHT(O)	SCA35/SCA85/VP-A34/VP-A850
302	AD98-12027F	ASS'Y-CASE RIGHT;SC-L300,-	SCA30/SCA33/SCA80/VP-A30 VP-A31/VP-A33/VP-A800
	AD98-12029Y	ASS'Y-CASE RIGHT;SV-L350,NTSC,-	SCA35/SCA85/VP-A34/VP-A850
902	AD60-10543A	SCREW-MACHINE;-,BH,+,-,M2,9,BLK,-,BLK	ALL
903	AC60-10020A	SCREW-MACHINE;BH,+,M2,X5,FZB,FE,UP,-,-	ALL
904	AC60-10055A	SCREW-TAPPING;BH,+,-,M2,X4,FZB	ALL
907	AC60-10024A	SCREW-MACHINE;BH,+,M2,X3,FZW,FE,-,-,-	ALL
908	AD60-10001A	SCREW-MACHINE;BH,B,1.7*5.5,-,FE,BLACK,-,	ALL
910	AD60-10510A	SCREW-MACHINE;-,PLAN,+,-,M1.4X5,5,BLK,FE	ALL
914	AD60-00003A	SCREW-TAPTITE;-,+,-,H8.5,2X6,-	ALL

6-5 EVF (SCA30/VP-A30/VP-A31/VP-A34/VP-A800/VP-A850)

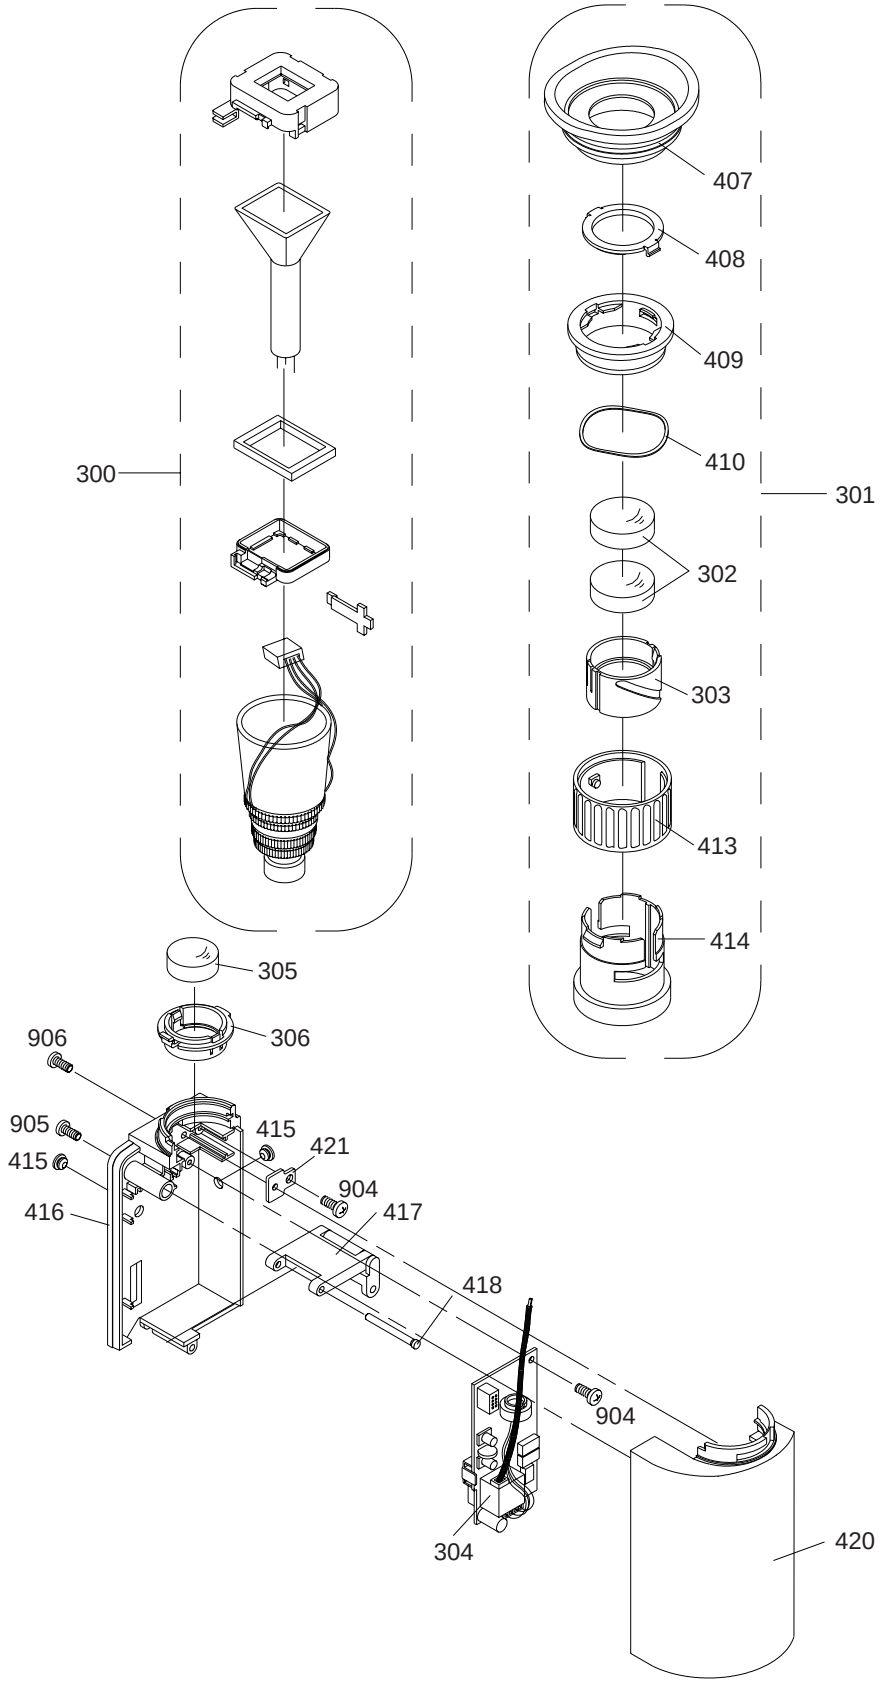

Loc. No	New Part No	Description and Specification	Remark
300	AC90-10012V	ASS'Y-CRT;CS96(SPORTS),-	SCA30/VP-A30/VP-A31/VP-A34 VP-A800/VP-A850
301	AD98-11265G	ASS'Y-EVF LENS;A3-PJ,B/W	SCA30/VP-A30/VP-A31/VP-A34 VP-A800/VP-A850
302	AC67-12070A	LENS-EVF(MD);PMMA D19.1 ASP,-,-,-,-,-	SCA30/VP-A30/VP-A31/VP-A34 VP-A800/VP-A850
303	AD61-22029A	HOLDER-LENS A;-,ABS94,HB,BLK,-,-	SCA30/VP-A30/VP-A31/VP-A34 VP-A800/VP-A850
304	AD90-10850M	ASS'Y-EVF BOARD;SC-L350,NTSC -A3/S3/CS99	SCA30
	AD90-10850N	ASS'Y-EVF BOARD;VP-L350,PAL-A3/S3/CS99	VP-A30/VP-A31/VP-A34/VP-A800 VP-A850
305	AC67-10066A	LENS-EVF GJ;-,OPT,GRASS-F1,D11.5,-,CG819	SCA30/VP-A30/VP-A31/VP-A34 VP-A800/VP-A850
306	AD61-21142A	HOLDER-LENS B;-,ABS94,HB,BLK,-,-	SCA30/VP-A30/VP-A31/VP-A34 VP-A800/VP-A850
407	AD73-10049A	RUBBER-EYE CUP;TPR BLK,-,-,-	SCA30/VP-A30/VP-A31/VP-A34 VP-A800/VP-A850
408	AD61-50783A	GUIDE-LOCK;-,ABS94,HB,-,-,-,-	SCA30/VP-A30/VP-A31/VP-A34 VP-A800/VP-A850
409	AD61-50782A	GUIDE-CAP;-,ABS94,HB,-,-,-,-	SCA30/VP-A30/VP-A31/VP-A34 VP-A800/VP-A850
410	AD61-60632A	SPRING-EVF;-,-,SUS304 T0.3,-,-,-,-	SCA30/VP-A30/VP-A31/VP-A34 VP-A800/VP-A850
413	AD60-42038A	RING-EVF;-,ABS94,HB,-,-,-	SCA30/VP-A30/VP-A31/VP-A34 VP-A800/VP-A850
414	AD60-42039A	RING-GUIDE;-,ABS94,HB,-,-,-	SCA30/VP-A30/VP-A31/VP-A34 VP-A800/VP-A850
415	AD61-20918B	CAP-FOCUS;-,MBR,-,BLK,-,VP-K70	SCA30/VP-A30/VP-A31/VP-A34 VP-A800/VP-A850
416	AD64-32009A	CASE-EVF R;-,ABS94,V0,-,-,-,-,-	SCA30/VP-A30/VP-A31/VP-A34 VP-A800/VP-A850
417	AD66-80164A	LINK-EVF;-,POM,-,-,-	SCA30/VP-A30/VP-A31/VP-A34 VP-A800/VP-A850
418	AD61-50781A	SHAFT-LOCK;-,C3602BD,-,-,-,-,-	SCA30/VP-A30/VP-A31/VP-A34 VP-A800/VP-A850
420	AD64-32008A	CASE-EVF L;-,ABS94,V0,-,-,B/W,NTSC,SCA3	SCA30
	AD64-32008C	CASE-EVF L;VP-A850,ABS94,V0,16X,B/W,PAL,	VP-A30/VP-A31/VP-A34/VP-A800 VP-A850
421	AD61-00032A	PLATE--EVF;-,-,-,SECC-P, T0.8,A3-PJ	SCA30/VP-A30/VP-A31/VP-A34 VP-A800/VP-A850
904	AC60-10055A	SCREW-TAPPING;BH,+,-,M2,X4,FZB	SCA30/VP-A30/VP-A31/VP-A34 VP-A800/VP-A850
905	AC60-10054A	SCREW-TAPPING;BH,+,-,M2,X6,FZB	SCA30/VP-A30/VP-A31/VP-A34 VP-A800/VP-A850
906	AD60-00002A	SCREW MACHINE;-,-,-,-,-,-,M2X4, -FH, FEN	SCA30/VP-A30/VP-A31/VP-A34 VP-A800/VP-A850

6-6 CVF (SCA33/SCA35/SCA80/SCA85/VP-A33)

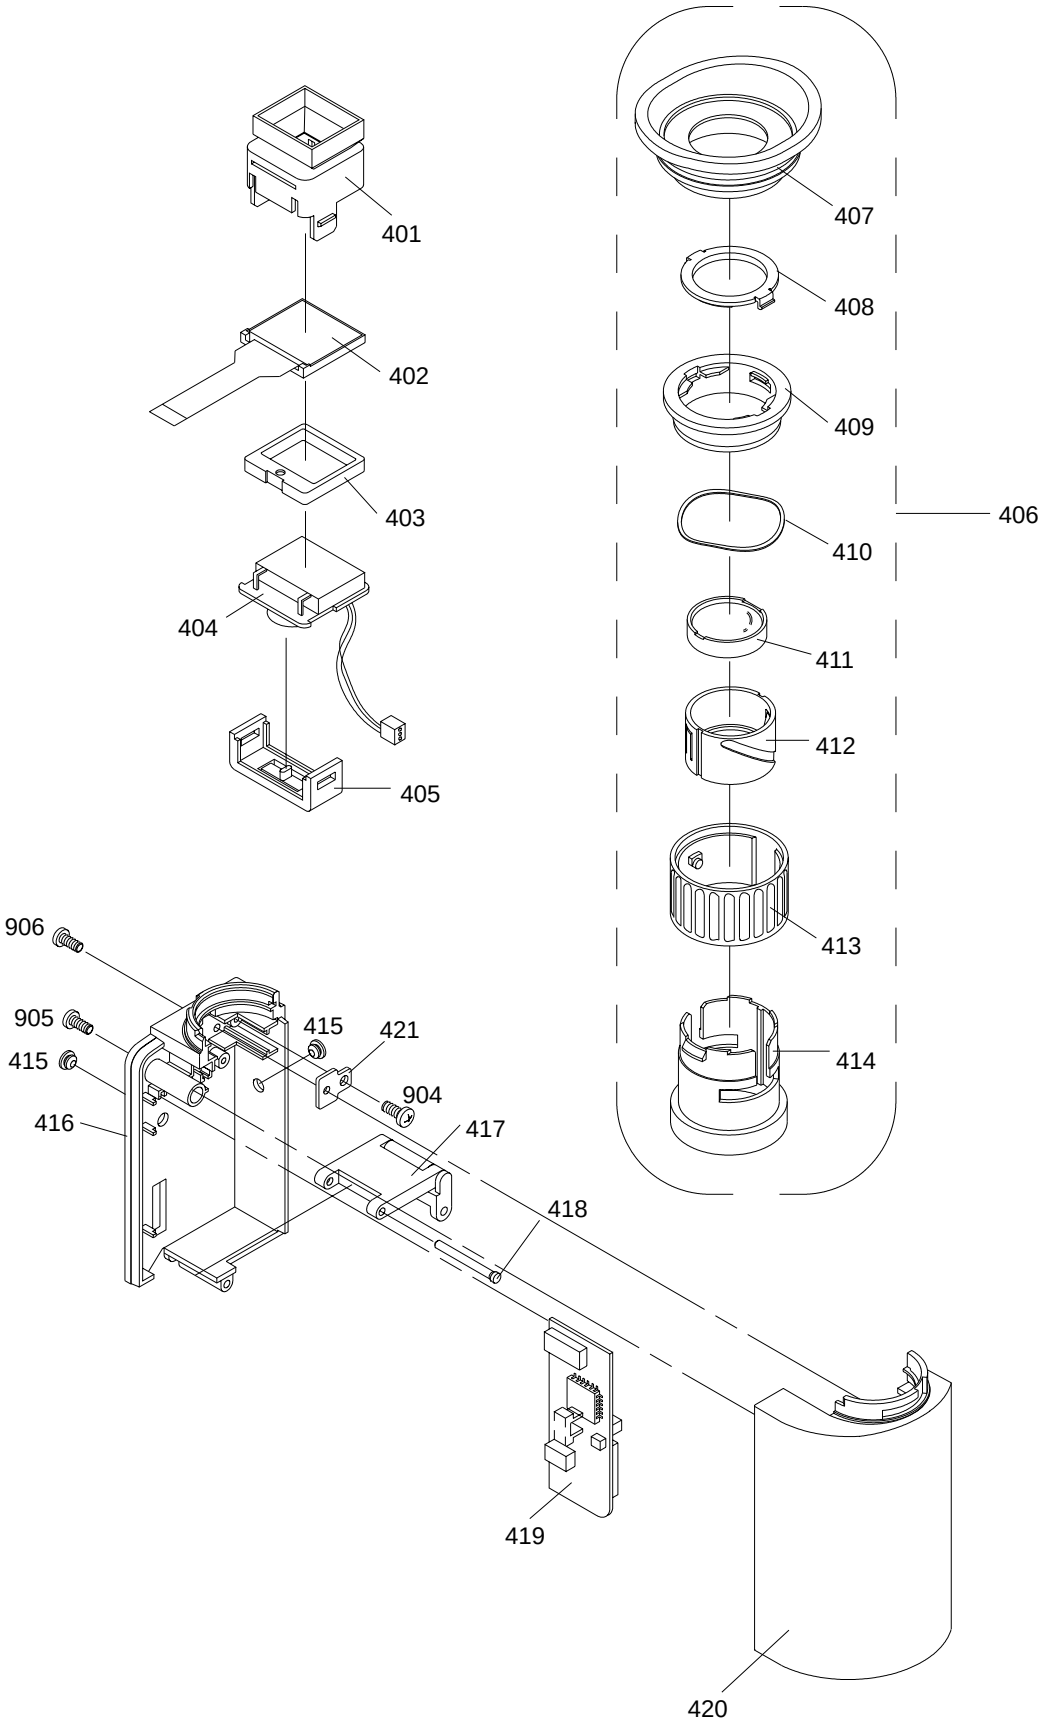

Loc. No	New Part No	Description and Specification	Remark
401	AD61-21045A	HOLDER-LCD;-,PC/ABS,VO,-,-,VP-A20	SCA33/SCA35/SCA80/SCA85 VP-A33
402	AC07-10001L	LCD DISPLAY;LCX005BKB,COLOR,537x227,0.5	SCA33/SCA35/SCA80/SCA85 VP-A33
403	AD61-50708A	GUIDE-LIGHT;-,ABS94V0,-,T1.5,BLK,-,SV-S9	SCA33/SCA35/SCA80/SCA85 VP-A33
404	AD90-10850J	ASS'Y-B/L BOARD;A3-P/J,NTSC,PAL	SCA33/SCA35/SCA80/SCA85 VP-A33
405	AD61-21045A	HOLDER-LIGHT;-,ABS94,HB,BLK,-,SV-S99	SCA33/SCA35/SCA80/SCA85 VP-A33
406	AD98-11265J	ASS'Y-CVF LENS;VP-A20,BW	SCA33/SCA35/SCA80/SCA85 VP-A33
407	AD73-10049A	RUBBER-EYE CUP;TPR BLK,-,-,-	SCA33/SCA35/SCA80/SCA85 VP-A33
408	AD61-50783A	GUIDE-LOCK;-,ABS94,HB,-,-,-,-	SCA33/SCA35/SCA80/SCA85 VP-A33
409	AD61-50782A	GUIDE-CAP;-,ABS94,HB,-,-,-,-	SCA33/SCA35/SCA80/SCA85 VP-A33
410	AD61-60632A	SPRING-EVF;-,-,SUS304 T0.3,-,-,-,-	SCA33/SCA35/SCA80/SCA85 VP-A33
411	AD67-10196A	LENS-EVF;-,-,PMMA,-,-,CLR,-	SCA33/SCA35/SCA80/SCA85 VP-A33
412	AD61-22030A	HOLDER-LENS;-,ABS94,HB,-,-,VP-A20	SCA33/SCA35/SCA80/SCA85 VP-A33
413	AD60-42038A	RING-EVF;-,ABS94,HB,-,-,-	SCA33/SCA35/SCA80/SCA85 VP-A33
414	AD60-42039A	RING-GUIDE;-,ABS94,HB,-,-,-	SCA33/SCA35/SCA80/SCA85 VP-A33
415	AD61-20918B	CAP-FOCUS;-,MBR,-,BLK,-,VP-K70	SCA33/SCA35/SCA80/SCA85 VP-A33
416	AD64-32009A	CASE-EVF R;-,ABS94,V0,-,-,-,-,-	SCA33/SCA35/SCA80/SCA85 VP-A33
417	AD66-80164A	LINK-EVF;-,POM,-,-,-	SCA33/SCA35/SCA80/SCA85 VP-A33
418	AD61-50781A	SHAFT-LOCK;-,C3602BD,-,-,-,-,-	SCA33/SCA35/SCA80/SCA85 VP-A33
419	AD90-10850G	ASS'Y-CVF BOARD;A3-P/L,PAL	VP-A33
	AD90-10850H	ASS'Y-CVF BOARD;A3-P/L,NTSC	SCA33/SCA35/SCA80/SCA85
420	AD64-32008B	CASE-EVF L;SCA85,ABS94,V0,X22.COLOR,NTS	SCA33/SCA35/SCA80/SCA85
	AD64-32008D	CASE-EVF L;VP-A85,ABS94,V0,22X,COLOR,PAL	VP-A33
421	AD61-00032A	PLATE--EVF;-,-,-,SECC-P, T0.8,A3-PJ	SCA33/SCA35/SCA80/SCA85 VP-A33
904	AC60-10055A	SCREW-TAPPING;BH,+,-,M2,X4,FZB	SCA33/SCA35/SCA80/SCA85 VP-A33
905	AC60-10054A	SCREW-TAPPING;BH,+,-,M2,X6,FZB	SCA33/SCA35/SCA80/SCA85 VP-A33
906	AD60-00002A	SCREW MACHINE;-,-,-,-,-,-,M2X4, -FH, FEN	SCA33/SCA35/SCA80/SCA85 VP-A33

6-7 Mechanical Parts (1)

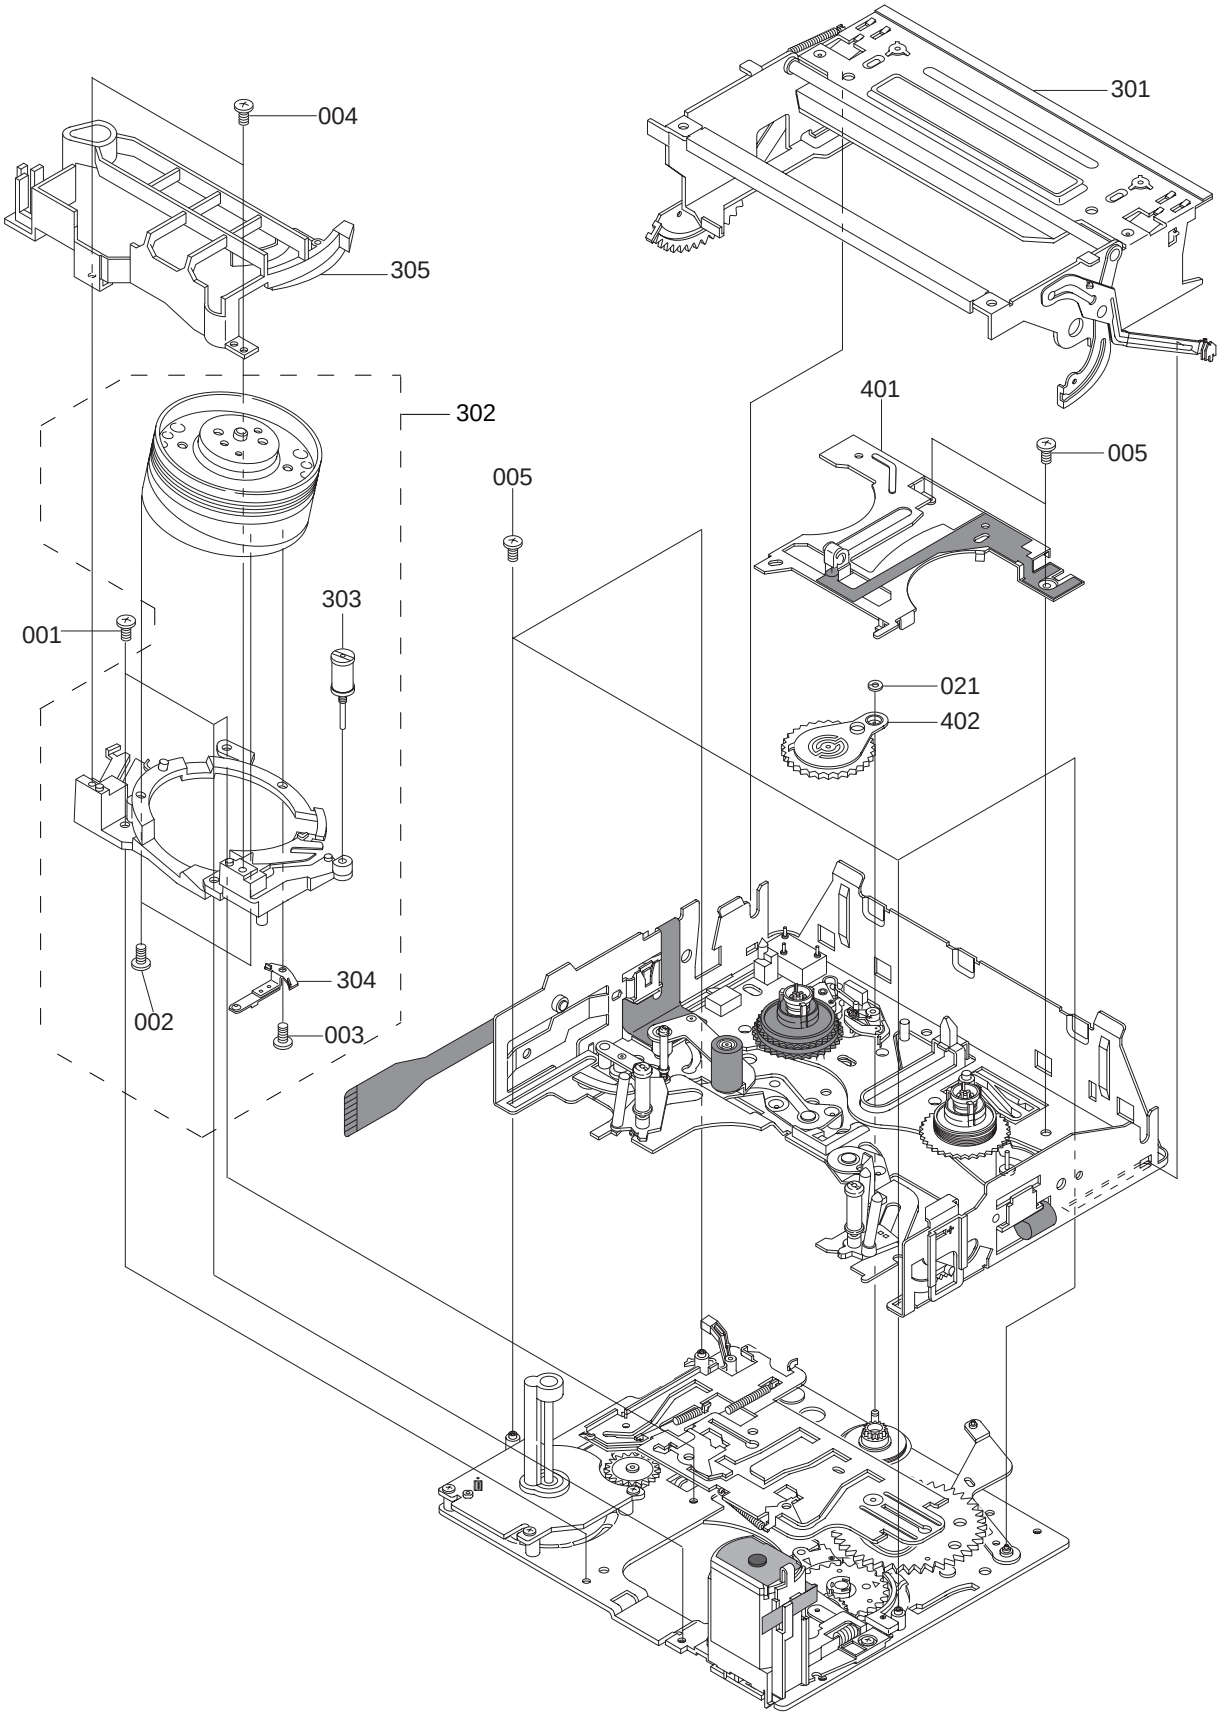

Loc. No	New Part No	Description and Specification	Remark
001	AC60-12083A	SCREW-MACHINE;B,BH,-,M1.7,L5,FE,WHT,-,-	
002	AD60-10500E	SCREW-MACHINE;-,BWSH,+,UP,M2,L5,ZPCNYLOK	
003	AD60-10500D	SCREW-MACHINE;-,BWSH,+,UP,M2,L7,ZPCNYLOK	
004	AC60-10017A	SCREW-MACHINE;BH,+,M1.7,X3.5,FEFZY,SWCH1	
005	AC60-12112A	SCREW-BH;-,BH,+,M1.4,L2,-	
021	AC60-30015A	WASHER-SLIT;ID 1.1,OD 2.6,T 0.4,POLYSLID	
301	AD96-10473P	ASS'Y-HOUSING;DE-6B,-	
302	AD96-10471Z	ASS'Y-DRUM;DE6A-PH-SS,-	VP-A30/VP-A31/VP-A33/VP-A34 VP-A800/VP-A850
	AD96-10471Y	ASS'Y-DRUM;DE6A-NH-SS,-	SCA30/SCA31/SCA33/SCA35 SCA80/SCA85
303	AD66-40153A	ROLLER-IMP ASS'Y;-,YF-10,OD7,-,DE-6	
304	AC61-72009A	CONTACT-EARTH BRUSH;SECC/PBSP/CR/C,-,-,-	
305	AC63-32091A	COVER-DRUM;DURACON(M90-44),-,-,-,-,-,DE-	
401	AC63-30009A	COVER-REEL ASS'Y;ABS 95,HB,-,-,-,-,DE-6,-	
402	AC66-12035A	IDLER-ASS'Y;-,-,DE-6	

6-8 Mechanical Parts (2)

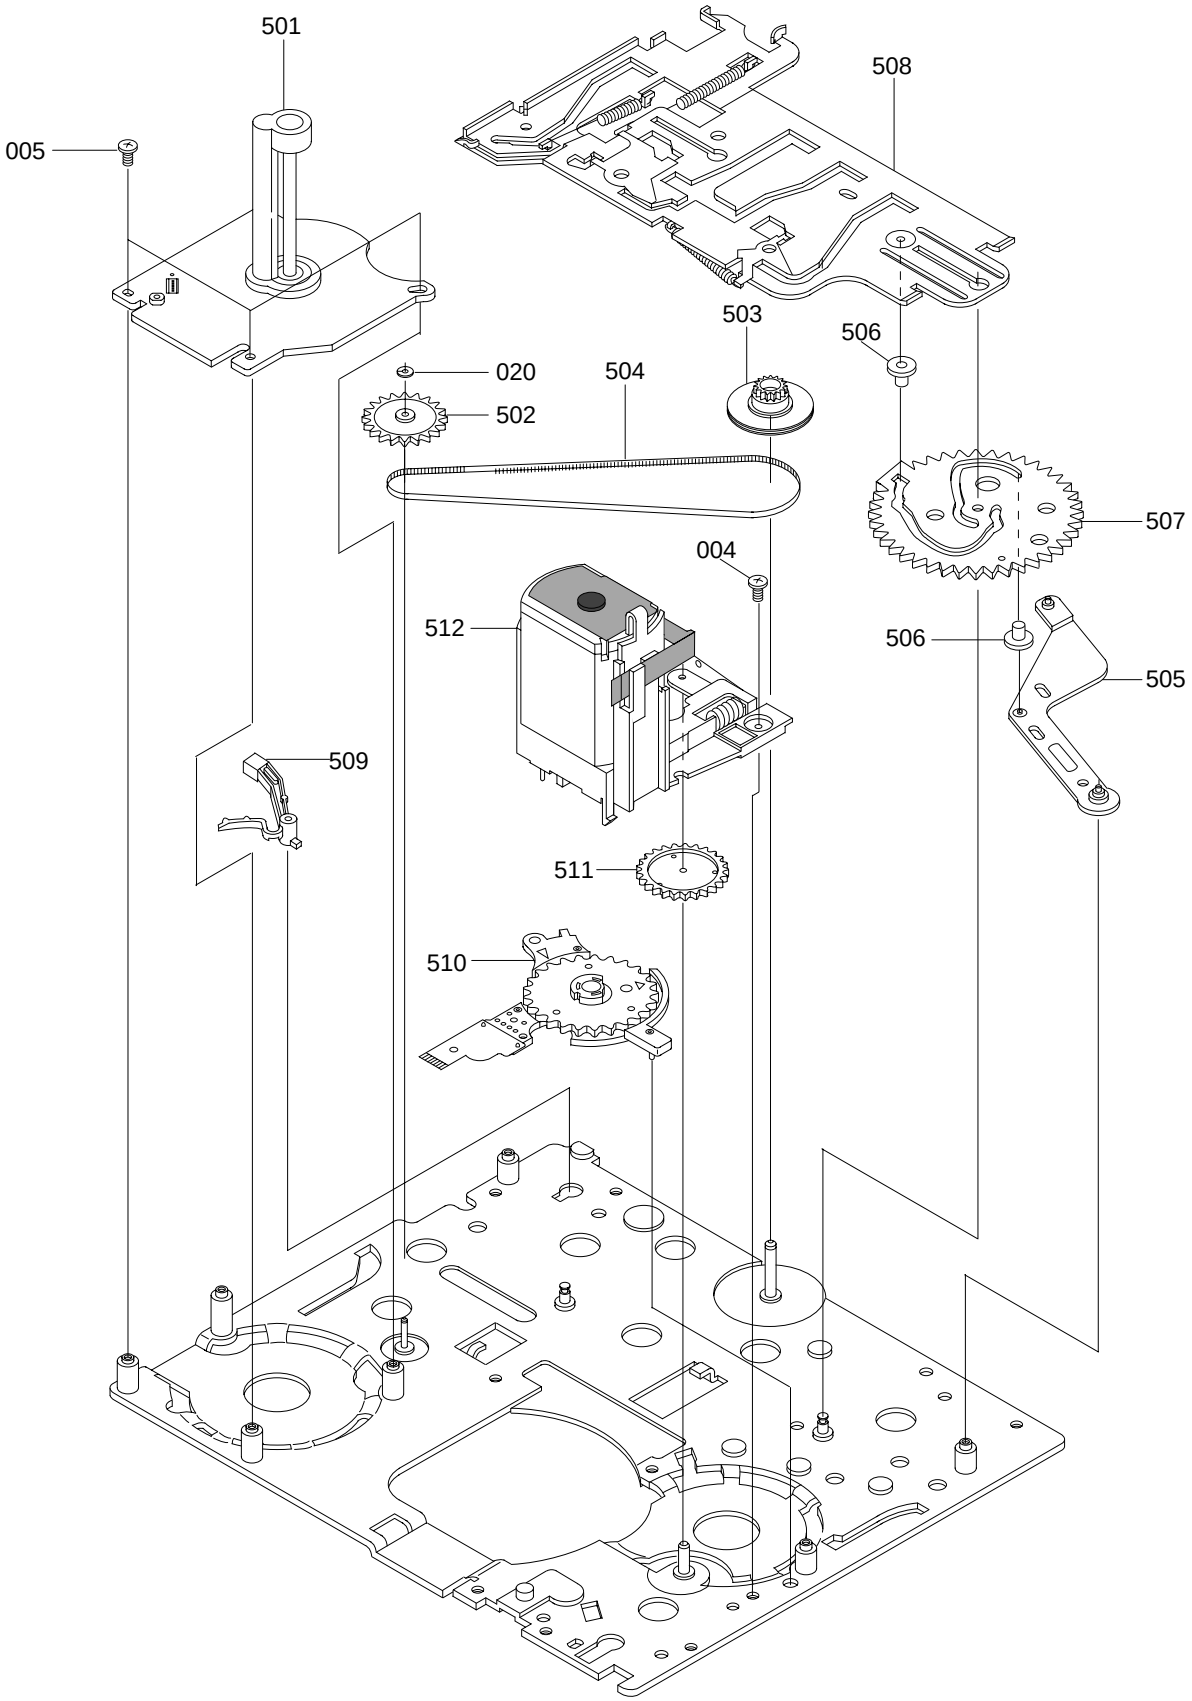

Loc. No	New Part No	Description and Specification	Remark
004	AC60-10017A	SCREW-MACHINE;BH,+,M1.7,X3.5,FEFZY,SWCH1	
005	AC60-12112A	SCREW-BH;-,BH,+,M1.4,L2,-	
020	AC60-30017A	WASHER-SLIT;ID 1,OD 2.6,T 0.4,POLYSLIDER	
501	AD31-12010A	MOTOR-CAPSTAN;DE-6B SHS,-,-	
	AD31-12001Q	MOTOR-CAPSTAN;DMCCHL06A(DE-6),-,-	
502	AC66-22123A	GEAR-CAPSTAN(ASS'Y);-,-,-,-,-,DE-6	
503	AC66-22124A	GEAR-PULLEY(ASS'Y);-,-,-,-,-,DE-6	
504	AC66-62001A	BELT-TIMMING;POLYURETHAN,L137 T0.4,-,-,-	
505	AC66-32197A	LEVER-CAM;SUS430-CP,T0.6,-,-,DE-6,-	
506	AC66-42005A	ROLLER-CAM MAIN;SUS303,-,-,PI3.5X1.1	
507	AC66-22092A	GEAR-CAM MAIN;SUS304-CSP,M0.5,Z64,-,-,-	
508	AC66-82055A	SLIDER-MAIN(ASS'Y);-,-,-,-,DE-6	
509	AC66-32198A	LEVER-EJECT;DURANEX #3300,-,-,-,DE-6,-	
510	AC34-22001C	SWITCH-MODE ASS'Y;HMW0484-01WA,DE-6,-,-,-	
511	AC66-22126A	GEAR-LOADING;DURACON(99-44),M0.4,Z37 WO,	
512	AC31-12001P	MOTOR-LOADING ASS'Y;DE-6,-,-	

6-9 Mechanical Parts (3)

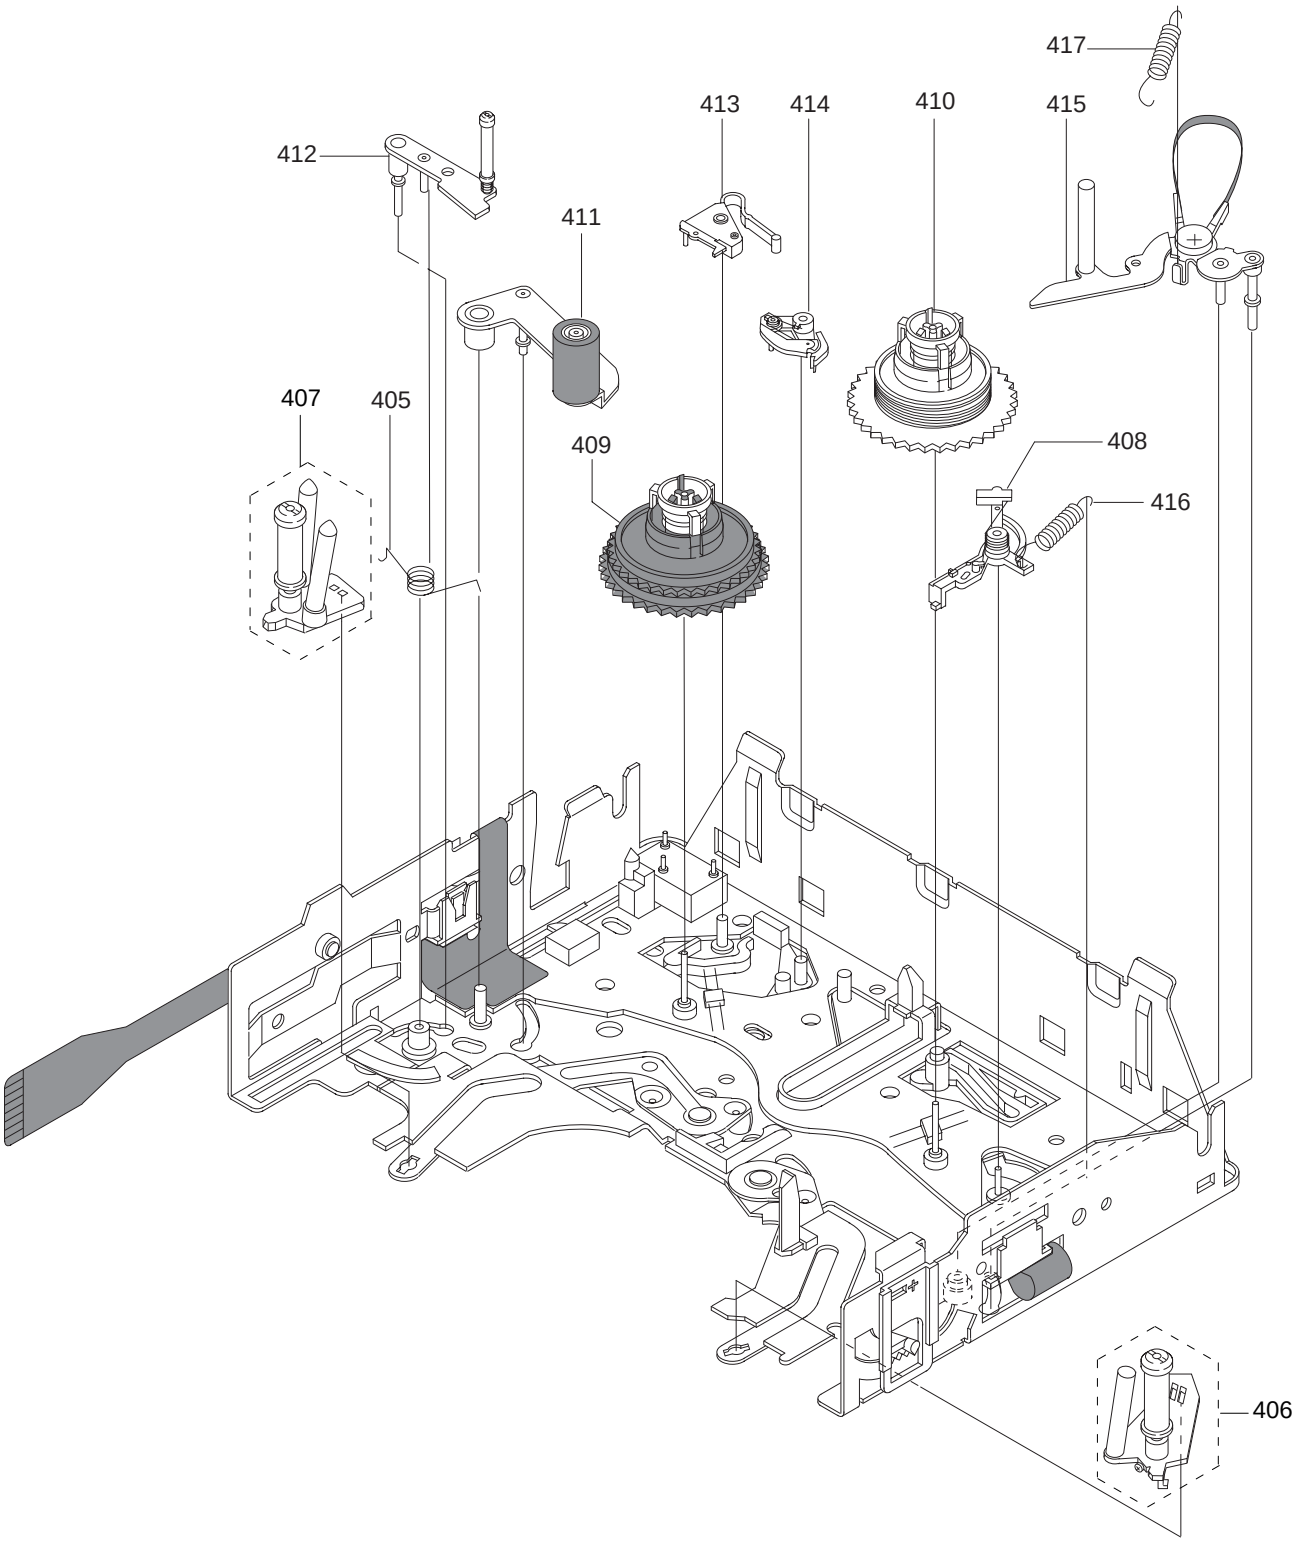

Loc. No	New Part No	Description and Specification	Remark
405	AD61-60622A	SPRING-REVIEW ARM;PS SUS304-WPB PI0.3	
406	AC61-52014A	POLE-BASE S(ASS'Y);ZDC2/SUS303,-,-,-,-,DE	
407	AC61-52015A	POLE-BASE T(ASS'Y);ZDC2/SUS303,-,-,-,-,DE	
408	AC66-32221A	BRAKE-SUB S(ASS'Y);-,-,-,-,DE-6,-	
409	AC66-12042A	REEL-T(ASS'Y);-,-,-,DE-6	
410	AC66-12041A	REEL-S(ASS'Y);-,-,-,DE-6	
411	AC66-32217A	ARM-PINCH ROLLER(ASS;-,-,-,-,DE-6	
412	AC66-32213A	ARM-REVIEW ASS'Y;-,-,-,-,DE-6	
413	AC66-32223A	BRAKE-MAIN(T);DURACON(M904-44),-,-,-,-,-	
414	AC66-30120A	BRAKE-SOFT T (ASS'Y);-,-,-,-,DE-6,-	
415	AC66-30093A	ARM-TENSION (ASS'Y);SUS304-CSP POM FELT,-	
416	AC61-62022A	SPRING-SOFT BRAKE(S);-,SUS304,-,-,-,-,-	
417	AC61-62023A	SPRING-TENSION;-,SUS304-WPB,-,-,-,-,-	